



# Nexus One Battery Housing Replacement

This guide is for removing the battery housing of the Google Nexus One

Written By: Niklas Johnson



# INTRODUCTION

installing the battery housing

---



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Rear Cover



- Using two fingers, push up on the rear cover.

## Step 2



- The rear cover slides up and off.



## Step 3 — Battery



- Using the plastic opening tools, pry the left bottom corner of the battery up.

## Step 4



- Pull the battery up and out.

## Step 5 — Battery Housing



- Remove the two Torx T5 screws.
- Remove the one Philips #00 screw.

## Step 6



- Using the plastic opening tool, pry up the battery housing upwards.
- Push pry tool down, undoing the plastic tab.



## Step 7



- Pry the upper left tab open on the battery housing.

## Step 8




- Pry the top tab of the battery housing.

## Step 9



- Pry the right side tab of the battery housing.

## Step 10

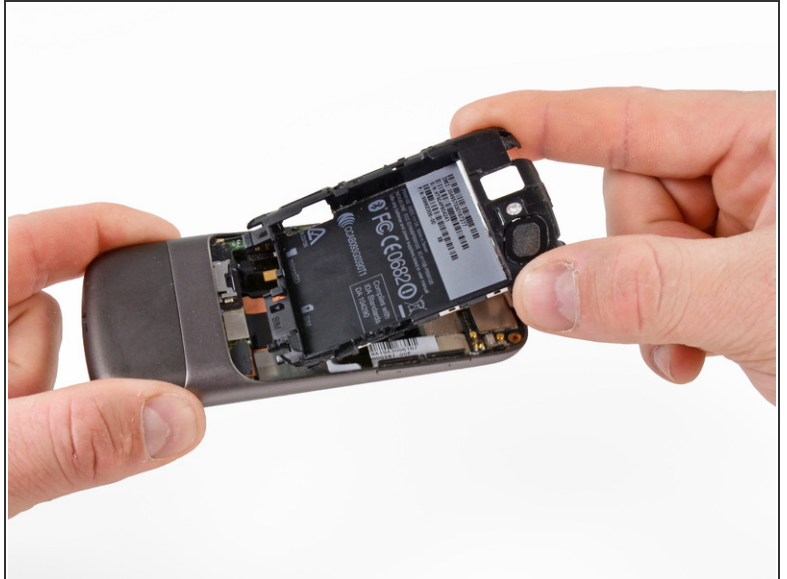

- Pull up on the battery housing.
- Slide the battery housing out to remove it.

To reassemble your device, follow these instructions in reverse order.

